

Installation

S19-210X

Pedestal-Mounted Stainless Steel Eyewash with Foot Pedal


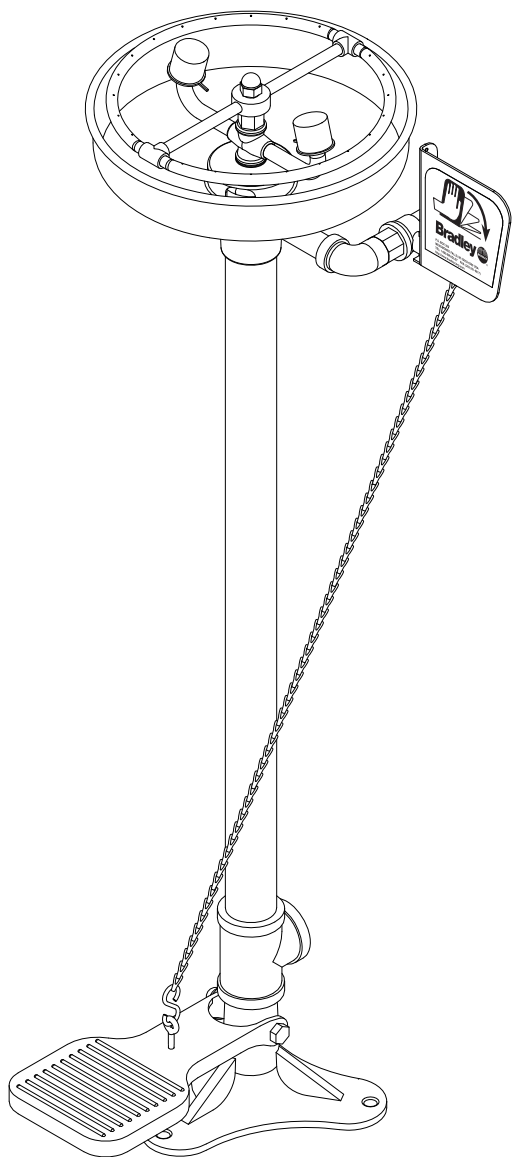


Table of Contents

Pre-Installation Information	2
Installation Instructions	3
Assembly of Components	4
Parts List	5


 **IMPORTANT** 

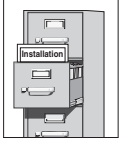

Read this installation manual completely to ensure proper installation, then file it with the owner or maintenance department. Compliance and conformity to drain requirements and other local codes and ordinances is the responsibility of the installer.




Separate parts from packaging and make sure all parts are accounted for before discarding any packaging material. If any parts are missing, do not begin installation until you obtain the missing parts.

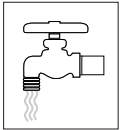

Flush the water supply lines before beginning installation and after installation is complete. Test the unit for leaks and adequate water flow. Main water supply to the eyewash should be "ON" at all times. Provisions shall be made to prevent unauthorized shutoff.



The ANSI Z358.1 standard requires an uninterrupted supply of flushing fluid at a minimum 30 PSI (0.21 MPa) flowing pressure. Flushing fluid should be tepid per ANSI Z358.1.

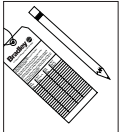

The inspection and testing results of this equipment should be recorded weekly to verify proper operation. This equipment should be inspected annually to ensure compliance with ANSI Z358.1.



Workers who may come in contact with potentially hazardous materials should be trained regarding the placement and proper operation of emergency equipment per ANSI Z358.1.



For questions regarding the operation or installation of this product, visit www.bradleycorp.com or call 1-800-BRADLEY.

Product warranties and parts information may also be found under "Products" on our web site at www.bradleycorp.com.

Installation

Supplies Required:

- (3) 3/8" floor anchors and bolts
- Pipe sealant
- Piping to 1/2" NPT water supply inlet
- Piping to 1-1/4" NPT drain outlet
- Sign-mounting hardware

NOTE: Local codes may require the installation of a backflow prevention valve to complete proper installation. Compliance with local codes is the responsibility of the installer. Valve must be tested annually to verify that it is functioning properly. Backflow prevention valves are not included with the fixture and may be supplied by the contractor or purchased from Bradley Corporation.

Step 1: Secure base to floor


1. Install three suitable anchors (supplied by installer) for 3/8" bolts in the floor.
2. Bolt the base to the floor anchors using 3/8" bolts (supplied by installer).

Step 2: Assemble components

1. Assemble the remaining unit components as shown on page 4.
 - Apply pipe sealant (by installer) to all male-threaded pipe joints.
 - Use the rubber grip pad provided or a strap wrench around pipes when tightening to prevent marring. Place the grip pad on the pipe, then put the wrench over the grip pad and turn the pipe with the wrench.
 - When connecting the steel chain, first connect the chain to the "S" hook on the foot treadle. Then, with the foot treadle raised up, straighten the chain and connect a link to the "S" hook on the valve handle. Make sure the chain is pulled tight. The length of chain will vary.


Step 3: Connect water supply

1. Connect the water supply piping (supplied by installer) to the 1/2" NPT inlet on the eyewash.
2. Connect the drain piping (supplied by installer) to the 1-1/4" NPT drain outlet on the eyewash.
3. Mount the safety sign to the wall using sign-mounting hardware supplied by installer.
4. Open the water supply lines. Test for leaks and adequate water flow.

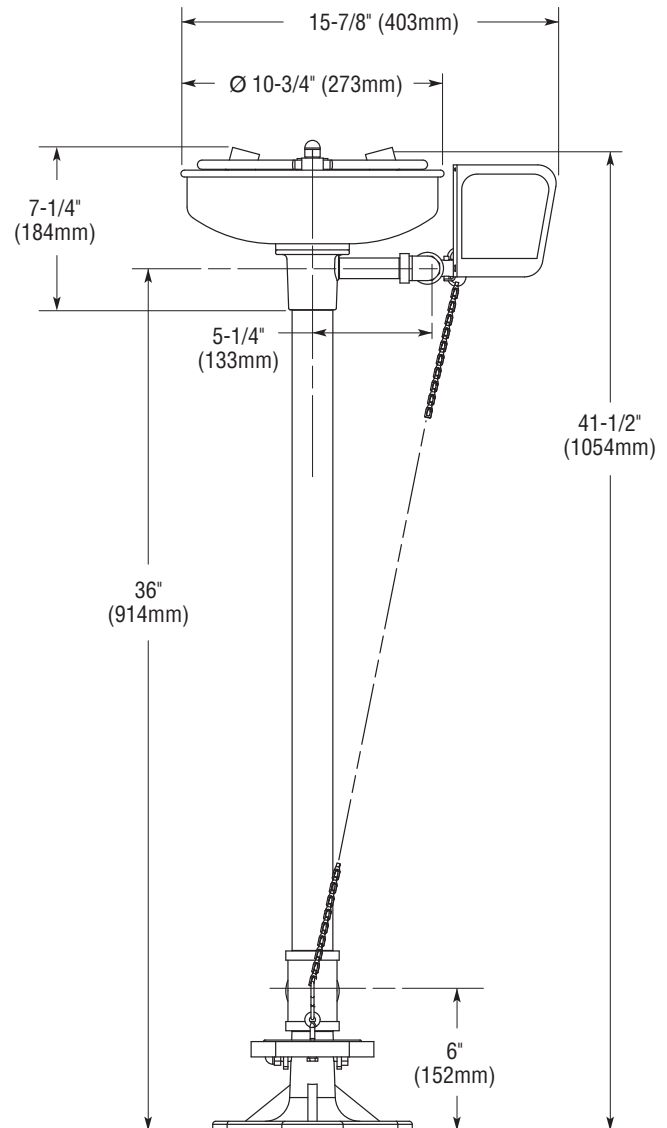

NOTE: All dimensions assume standard thread engagement. Variations in manufacturing allow for +/- 1/8" (3mm) per threaded joint. To find the tolerance of a dimension, add the number of thread joints in between a dimension and multiply it by 1/8" (3mm).

Assembly of Components

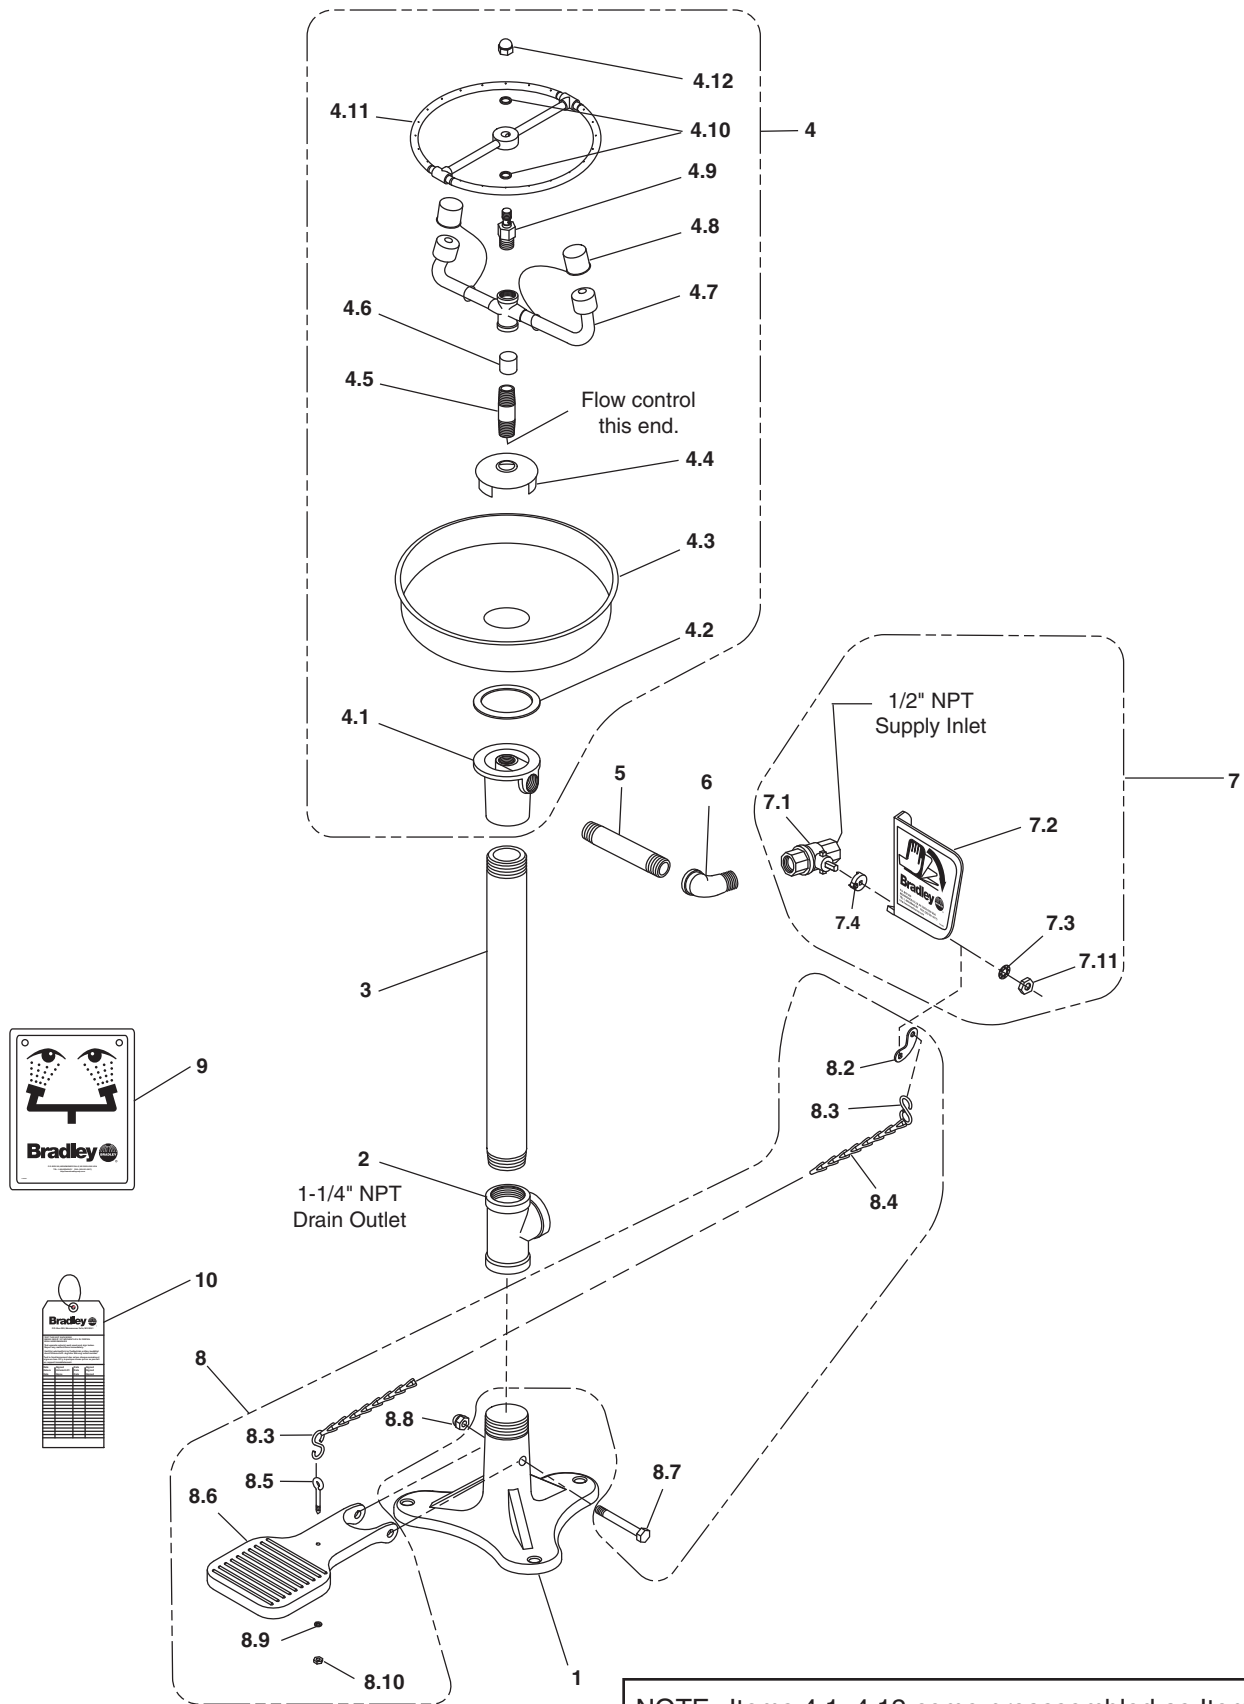

NOTE: Items 4.1–4.12 come preassembled as Item 4.

Parts List

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	131-059	1	Base	7.1	S27-282	1	1/2" Ball Valve with Nut
2	169-727	1	Pipe Tee 1-1/4" NPT	7.11	110-215	1	Nut only
3	113-006LC	1	Pipe 1-1/4" NPT x 27-1/2"	7.2	S08-336	1	Handle Assembly
4	S90-281	1	Stainless Steel Bowl Assembly	7.3	142-002DA	1	Lockwasher
4.1	111-039	1	Inlet Drain Fitting	7.4	153-372R	1	Adapter
4.2	124-028	1	Gasket	8	S45-572	1	HFSO Prepack
4.3	187-053	1	Stainless Steel Bowl	8.1	161-025	1	Hex Nut
4.4	173-009	1	Cup Strainer	8.2	128-136	1	Valve Handle
4.5	S21-073	1	Supply Pipe Assembly	8.3	269-646	2	"S" Hook
4.6	113-1159	1	Drain Spacer	8.4	134-009A	1	Stainless Steel Chain
4.7	S05-100	1	Eyewash Yoke Assembly	8.5	147-026	1	Eye Bolt
4.8	107-371	2	Tethered Dust Cover	8.6	181-008	1	Treadle
4.9	269-651	1	Swivel Stem	8.7	160-382	1	Screw
4.10	124-055	2	Quad Ring	8.8	161-140	1	Nut
4.11	139-087	1	Spray Ring Assembly	8.9	142-002BT	1	Lockwasher
4.12	110-199	1	Acorn Nut	9	114-051	1	Safety Sign
5	113-006LQ	1	Pipe 1/2" NPT x 3-1/2"	10	204-421	1	Emergency Inspection Tag
6	169-025	1	Elbow	11	269-915	1	Grip Pad (not shown)
7	S30-070	1	1/2" Valve/Handle Prepack				

Prepack S30-071 includes Items 7.11, 7.2, 7.3, 7.4
 Prepack S05-127 includes Items 4.9, 4.10, 4.11, 4.12