

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1455 Kleppe Lane ◆Sparks, NV 89431-6467 ◆(775) 359-4712 ◆Fax (775) 359-7424 E-mail: <u>haws@hawsco.com</u> ◆ website: <u>www.hawsco.com</u>

No. 2080203(17)

Model 9001EXP Alarm

NOTE TO INSTALLER: Please leave this information with the Maintenance Department.

LIMITED WARRANTY

HAWS[®] warrants that all of its products are guaranteed against defective material or poor workmanship for a period of **one year from date of shipment**. HAWS liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS Factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first class workmanship, provided that claim is made in writing to company within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS will not be liable for the cost of repairs, alterations or replacements, or for any expense connected therewith made by the owner or his agents, except upon written authority from HAWS, Sparks, Nevada. HAWS will not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that Haws has made no other warranties either expressed or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, or consequential damages claimed to arise under the contract of sale.

The emergency equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose, which they were intended. This product is intended to supplement first-aid treatment. Due to widely varying conditions HAWS cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

NO OTHER WARRANTIES EXPRESSED OR IMPLIED ARE AUTHORIZED, PROVIDED OR GIVEN BY HAWS.

SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL, PLEASE CALL:

1-800-766-5612

FOR PARTS CALL:

1-800-758-9378

(U.S.A. AND CANADA ONLY) MONDAY-THURSDAY: 6:00 A.M. – 4:00 P.M. PST FRIDAY: 6:00 A.M – 1:00 P.M. PST

RECOMMENDED TOOLS: Pipe joint sealant, screwdriver, pipe wrench, 14 AWG wire, ³/₄" conduit and basic electricians' tools for power connection.

LOCATION OF UNIT: The Model 9001EXP Alarm may be mounted directly to the upper stand pipe of a safety shower or wall mounted next to a shower or eyewash. The alarm should be clearly visible from several directions.

ELECTRICAL SUPPLY: 120 VAC 50/60 HZ, 100 Watts average power consumption. Power should be supplied by a dedicated circuit through a 10 AMP maximum breaker or fuse and should not supply power to any other devices. Suitable for use in Class I, Division 2, Group B, C, D areas; Temperature rating T2C (230°C) with 60 Watt lamp /T2A (280°C) with 100 Watt lamp. Unit supplied with 60 Watt lamp.

WATER SUPPLY: The flow switch requires a minimum of 2.4 GPM to activate. Mount flow switch in supply line with flow in horizontal direction and switch stem extending vertically from tee. Mount switch with at least 6" of straight pipe on both sides to minimize turbulence in switch.

| TROUBLESHOOTING | | | |
|-----------------|---------------------------------------|-----------|---|
| | PROBLEM | | REPAIR CHECKLIST |
| 1. | Alarm horn and light do not operate. | 1a. | Check incoming circuit for power and power from flow switch. |
| | | b. | Check fuse inside horn enclosure. |
| | | C. | Check that the direction of water flow corresponds to the arrow on the flow switch body. |
| | | d. | Check that water flow is sufficient. |
| | | e. | Check all electrical connections for security, including those in alarm base. |
| | | f. | Faulty flow switch. Replace entire switch assembly. |
| | | g. | Faulty flasher module in alarm. Replace flasher module. |
| 2. | Horn sounds but light does not flash. | 2a. | Replace with 60W standard light. |
| | | b. | Should replacement lamp also fail to operate, replace flasher module. |
| 3. | Lamp replacement. | За. | Remove the guard from the light fixture, and then unscrew the glass lens to replace the lamp. (See sheet 2 of installation drawing) |
| 4. | Alarm stays on. | 4a. b. | |

INSTALLATION PROCEDURE

- STEP 1: Choose a location for mounting the flow switch in the water supply line. The inlet and outlet ports of the flow switch must be a minimum of 6 inches from any tees or elbows in the water supply line. See attached installation drawing.
- Mount the flow switch assembly in the water supply line. The switch body must be in the vertical position with the water pipe horizontal. The water flow must be in the direction marked by the arrow on the flow switch body. Use Teflon tape or pipe sealing compound on all water pipe connections.
- STEP 3: Choose a location for mounting the alarm assembly. The alarm housing should be positioned along a vertical axis at least 7 feet above ground for best visibility. The alarm may be mounted directly to a water pipe using the supplied bracket, U-bolt, washers and nuts. The alarm can also be bolted to a flat surface such as a wall, using the supplied wall-mounting bracket with appropriate fasteners (not supplied).
- STEP 4: Connect power to terminal blocks 1 and 2 for the alarm. Terminal blocks 5 and 6 may be used for remote alarm actuation. Refer to wiring diagram on installation drawing.

NOTICE:

ALL POWER CONNECTIONS MUST BE MADE ACCORDING TO NEC CODE USING TYPE 4 AND CLASS 1 DIVISION 2 COMPLIANT EQUIPMENT.

OPERATION AND TEST INSTRUCTIONS

Test weekly. Instruct all employees in the use of emergency showers and eyewashes.


- **STEP 1:** Apply power to the alarm branch circuit. The alarm should remain OFF.
- STEP 2: Open the shower or eyewash flow valve. The alarm should sound and the light should flash shortly after water flows from the system.
- **STEP 3:** Shut off the flow valve. The light and horn should turn off.

For more information about Haws products see our website: www.hawsco.com

© 2009 Haws[®] Corporation – All Rights Reserved HAWS[®] and other trademarks used in these materials are the exclusive property of Haws Corporation.

08/09 Model 9001EXP Page 3 of 6

PARTS BREAKDOWN

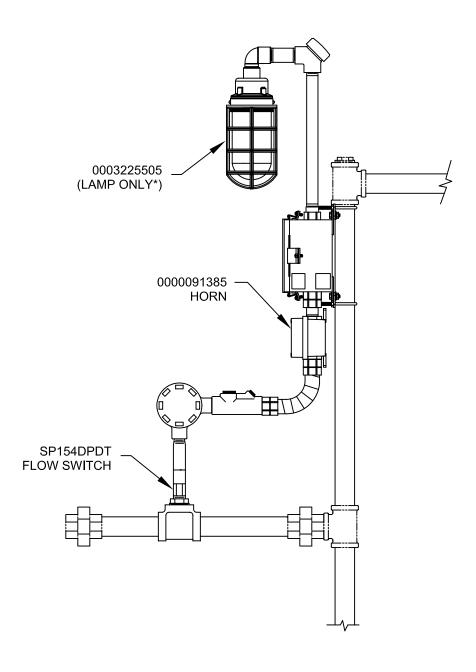

* TEMPERATURE CODE IS AFFECTED BY LAMP WATTAGE.
RECOMMENDED 60 WATT LAMP YIELDS T2C (230 DEG C), 150 WATT YIELDS T2 (300 DEG C).


WHEN ORDERING
PARTS PLEASE
SPECIFY YOUR
MODEL NUMBER



1455 KLEPPE LANE
SPARKS, NEVADA 89431
(775) 359-4712 FAX (775) 359-7424
E-MAIL: HAWS@HAWSCO.COM
WERSITE: WMMW HAWSCO.COM

WEBSITE: WWW.HAWSCO.COM


| DATE: 03/17/93 | CHECK | APPVID | SCALE: 1/4 |
| PART NUMBER:

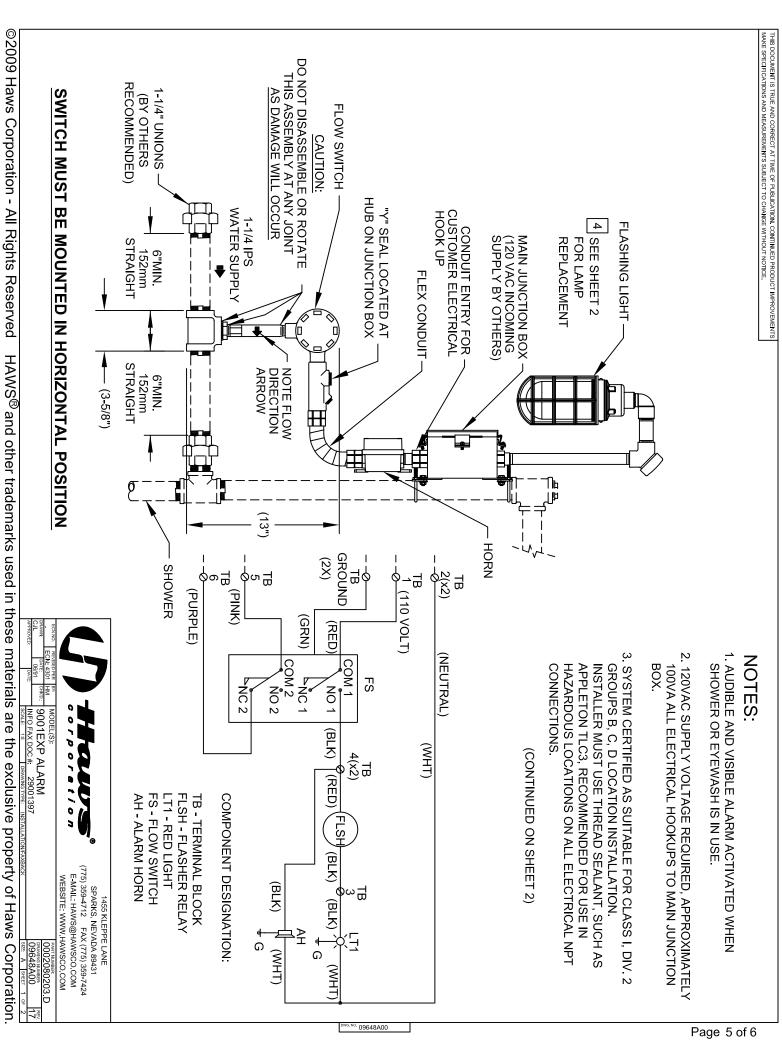

NOTES: (CONTINUED FROM SHEET 1)

4. LIGHT REPLACEMENT INSTRUCTIONS:

- REMOVE GUARD AND GLOBE: GLOBE COUNTER CLOCKWISE UNTIL GLOBE IS FREE CLOCKWISE UNTIL GUARD IS FREE. FINALLY ROTATE WHERE SHOWN). NEXT, ROTATE GUARD COUNTER FIRST LOOSEN SET SCREW (LOCATED ON GUARD AND LAMP IS EXPOSED.
- REPLACE LAMP WITH RECOMMENDED 130 VOLT, P/N 0003225505 60 WATT, RED.
- 3) REPLACE GUARD AND GLOBE: CLOCKWISE ONTO THREADS UNTIL TIGHT. FINALLY SEALED AGAINST GASKET. NEXT, ROTATE GUARD ROTATE GLOBE CLOCKWISE ONTO THREADS UNTIL TIGHTEN SET SCREW.

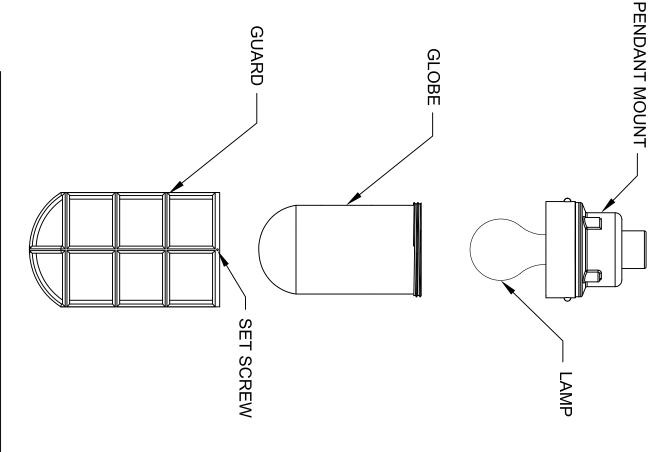



HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation

9001EXP ALARM INFO FAX DOC # 29001397

©2009 Haws Corporation - All Rights Reserved

1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM

WEBSITE: WWW HAWSCO COM 2080203