

# **SPEAKMAN COMPANY**

## **SE-570-LH Installation, Maintenance & Operation Instructions**

### **EYESAVER® EYEWASH**

#### **DESCRIPTION**

Deck mounted emergency eyewash for left-hand activation. Supplied with a ¼ turn ceramic PERFECT® valve that is activated when the eyewash is rotated 90° over an open sink. Unit is supplied with an adjustable flow regulator. Aerated spray outlets are individually adjustable for maximum performance. Unit mounts on counter tops up to 2-1/4" thick.

#### **SPECIFICATIONS**

SPRAY HEADS: (2) Brass, Chrome-Plated, Aerated.  
VALVE: ¼ Turn ceramic PERFECT VALVE®.  
FLOW REGULATOR: Brass, Chrome-Plated.  
INLET: 1/2" NPSM.  
SHIPPING WEIGHT: 6 lb.  
EMERGENCY SIGN: 7-7/8" X 7-7/8" Plastic Wall Sign.

#### **OPTIONS**

◇ AL2 (Electrical Alarm)	◇ ILS (In-Line Strainer)
◇ AL3 (Electrical Alarm)	◇ VPL (Vapor Proof Light)
◇ AL2-C1D2 (Electrical Alarm / Haz. Area)	◇ SGN4 (Eye Wash Floor Sign)
◇ AL3-C1D2 (Electrical Alarm / Haz. Area)	◇ FPV (Anti-Freeze Protection Valve)
◇ FLW (Flow Switch)	◇ SPV (Anti-Scald Protection Valve)

#### **INSTALLATION**

Review drawing (as shown on other side) to assure proper installation. At desired location, use the supplied deck plate to mark mounting holes. Drill the 1" diameter hole through the countertop (2-1/4" thick max.), and drill the 1/4" diameter hole a minimum of 5/16" deep. Be sure the holes are drilled as straight as possible. Place eyewash through drilled holes making sure the threaded shank & ¼" stop screw fit with no interference, and that the eyewash is resting flat on the deck plate. Attach eyewash to countertop using the supplied hardware. Install the supplied volume regulator (use thread sealant on all joints), making sure the adjustment screw is facing in a direction that is easily accessible for later adjustment. Connect a water supply to unit that is a 1/2" minimum uninterrupted source of potable water (use pipe sealant on connection). Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury.

#### **OPERATION**

Be sure unit is above sink or drain before activating. The eyewash is activated by grasping the eyewash and rotating it 90° to the full open position. Once the unit is activated, water will discharge from the spray outlets until the eyewash is manually rotated back to the off position.


#### **TESTING PROGRAM**

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspectors initials should be noted.

## MAINTENANCE

The valve and the eyewash aerators are the only portions of the unit that may require maintenance. Should you need parts to repair this unit, please reference the parts listing below for correct part numbers. Before any maintenance is done **be sure to shut the water supply off.**

**WARNING:** Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

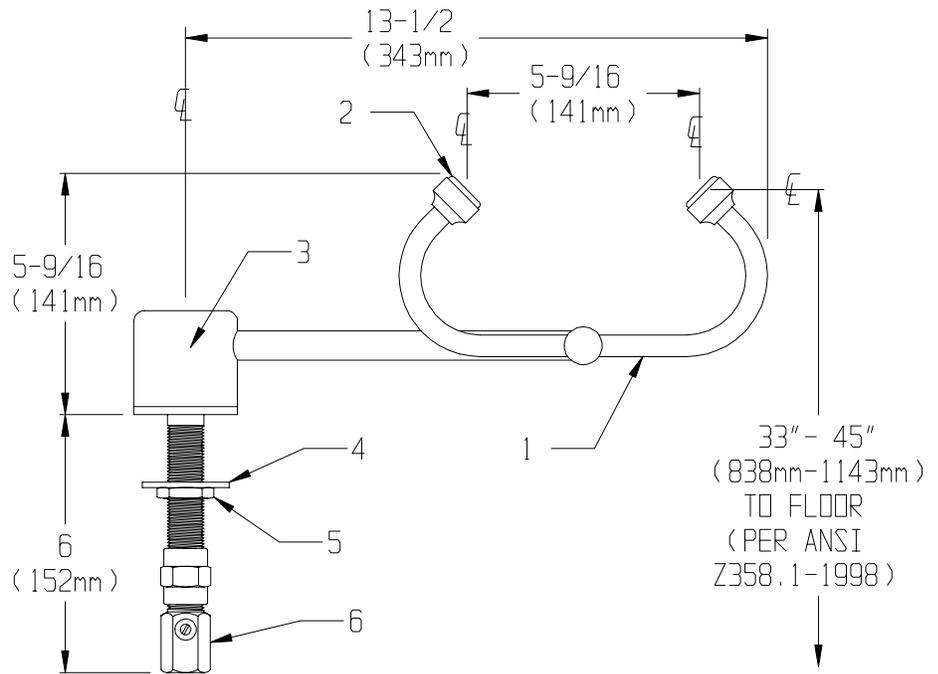

## SE-572 REPLACEMENT/REPAIR PARTS


<u>ITEM</u>	<u>PART/GROUP #</u>	<u>DESCRIPTION</u>
1	G24-0112	Bull Horn Assembly
2	05-1177-PC	(2) Aerator Assy.
3	RPG05-0686	PERFECT® Valve (Not Shown)
4	45-0678	Flat Steel Washer
5	01-0412-MO	1/2" - 14 NPSM Locknut
6	G20-1940-RCP	1/2" Volume Regulator
7	G05-0679-MO	(2) Dust Cap Assembly (Not Shown)
8	91-1222	Deck Plate (Not Shown)
9	SGN3	Emergency Wall Sign (Not Shown)

## FLOW DATA

EYEWASH:

FLOW PRESSURE PSI (BAR)	15 (1)
FLOW RATE GPM (LPM)	3 (11)

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 15 PSI and a maximum static pressure of 80 PSI.

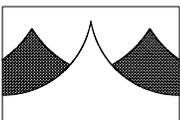

### **SPEAKMAN COMPANY**

The Quality leader Since 1869  
 P.O. Box 191, Wilmington, DE 19899-0191 USA  
 1-800-537-2107, Fax: 1-800-977-2747

Note: All units meet existing ANSI Z358.1 1998 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.