


B-0598

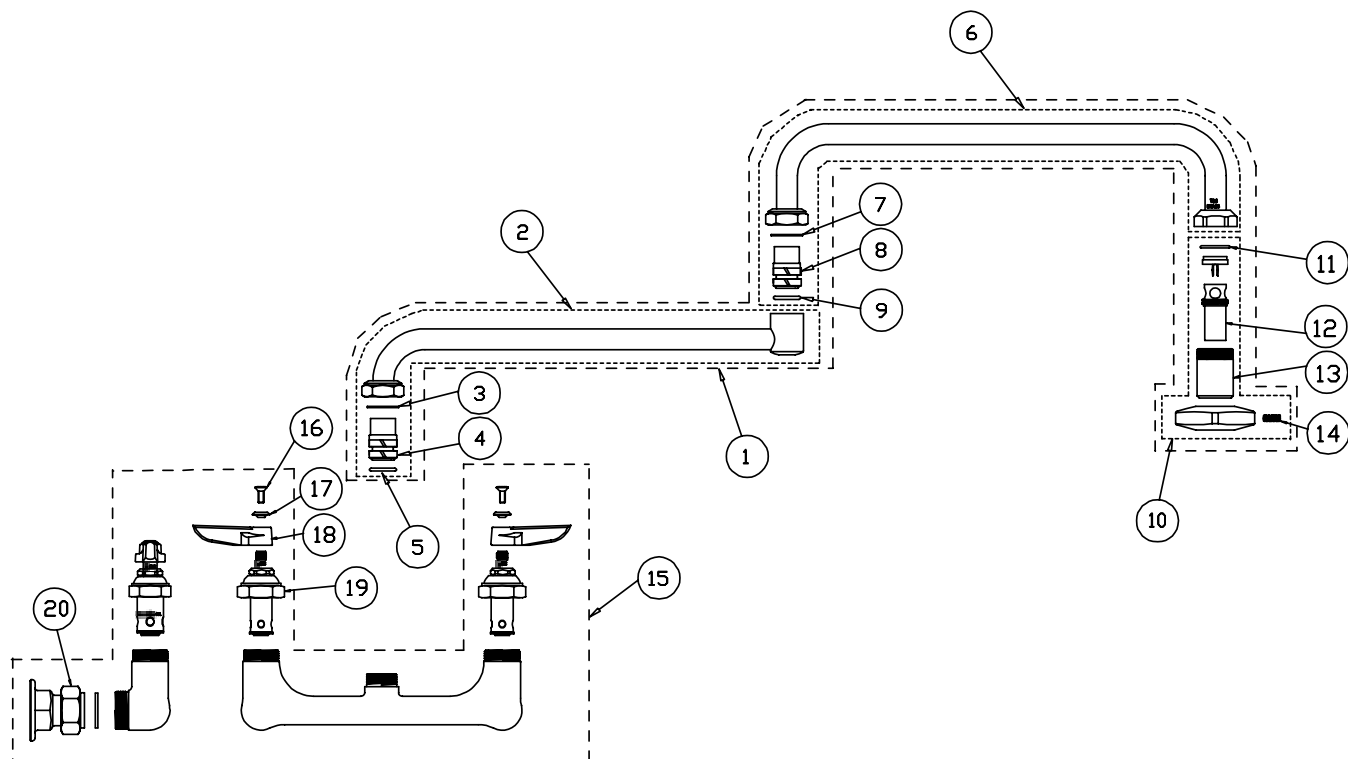

Faucet Assembly with Spring Checks

1	Asm, Double Joint Nozzle	002872-40	12	Spout	001498-25
2	Asm, Nozzle, 12", Back Section	002871-40	13	Body, Spout	000587-25
3	Washer	009538-45	14	Set Screw, Handle	000936-45
4	Sleeve	011429-45	15	Asm, Base Faucet w/ Spring Checks	007945-40
5	O-Ring	001074-45	16	Screw, Handle	000922-45
6	Asm, Nozzle, 12", Front Section	002869-40	17	Index, Button - Blue/Cold	001660-45
7	Washer	009538-45		Index, Button - Red/Hot	001661-45
8	Sleeve	011429-45	18	Handle, Lever	001638-45
9	O-Ring	001074-45	19	Asm, Spindle, Eterna - Cold	002711-40
10	Asm, Out	035A		Asm, Spindle, Eterna - Hot	002712-40
11	O-Ring, .739 x .070	003426-45	20	Asm, Coupling Flange	002893-40

