

OPTIONAL PUSHBUTTON BUBBLER

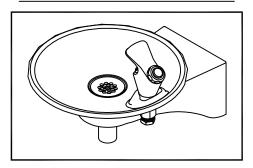


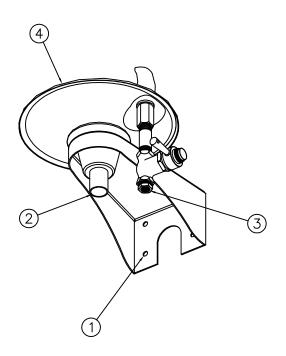


INSTALLATION INSTRUCTIONS:

- A— STRUCTURALLY REINFORCE THE WALL BEHIND THE FOUR 3/8"
 DIAMETER MOUNTING HOLES (1) AT THE DIMENSIONS SHOWN
 AND INSTALL WALL ANCHORS BY OTHERS.
- B- ROUGH-IN WASTE OUTLET FOR THE 1-1/4" OUTER DIAMETER PLAIN END TAILPIECE (2).
- C-ROUGH-IN WATER SUPPLY (3) AT DIMENSION SHOWN FOR 3/8" NPT FEMALE LEVER VALVE SUPPLY INLET. RECOMMENDED UNION AND SHUTOFF VALVE TO BE SUPPLIED BY OTHERS.
- D- CAREFULLY REMOVE FIXTURE (4) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.


OPTIONAL -PT1 1-1/4" O.D. P-TRAP

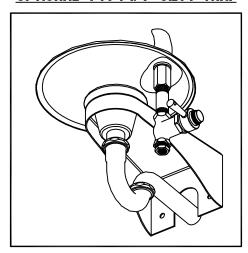

BACK ROUGH-IN VIEW

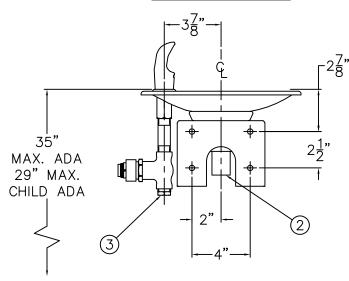


- E- SECURELY ANCHOR FIXTURE 4 TO WALL THRU MOUNTING HOLES 1 WITH ANCHORING HARDWARE BY OTHERS.
- G- MAKE-UP 1-1/4" O.D. WASTE CONNECTION TO TAILPIECE (2).
- H- FLUSH WATER SUPPLY (3) BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO FIXTURE.
- I- CONNECT THE WATER SUPPLY 3 BY OTHERS TO 3/8" NPT FEMALE INLET. STOP ON THE SUPPLY IS RECOMMENDED.

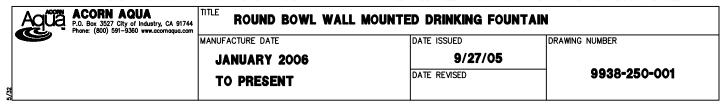

9938-250-500



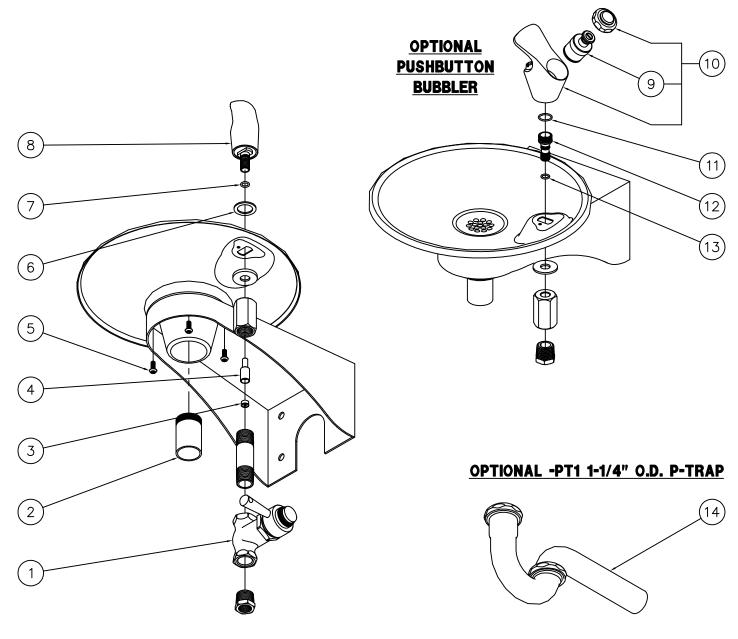

1		018-010-199 SELF CLOSING LEVER VALVE			8	7018-012-199	SOLID BUBBI	LER
2	4952-002-000	002-000 1-1/4" OUTER DIAMETER TAILPIECE			9	7000-060-000	VALVE CART	RIDGE
3	0471-010-000	FLOW REGULATOR			10	2990-010-002	DECK MOUN	TED PUSHBUTTON BUBBLER
4	7018-008-199	-199 FLOW REGULATOR ADAPTER			11	0404-015-000	O-RING	
5	0112-056-000	12-056-000 CENTER REJECT ALLEN BUTTON HEAD SCREW			12	7018-011-199	BUBBLER AD	APTER
6	7000-007-000	000-007-000 BUBBLER GASKET			13	0404-011-000	0-RING	
7	0404-011-000	011-000 0-RING			14	4953-002-000	1-1/4" x 1-	-1/4" OUTER DIAMETER P-TRAP
ITEM	PART NUMBER	DESCRIPTION			ITEM	PART NUMBER		DESCRIPTION
A	ACORN A P.O. Box 3527 City Phone: (800) 591-	QUA y of Industry, CA 91744 9360 www.acomaqua.com	TITLE ROUND	BOWL WALL	MOUN	TED DRINKING	FOUNTAIN	l
			MANUFACTURE DATE			DATE ISSUED		DRAWING NUMBER
	JANUARY 2006				10/27/05			

TO PRESENT

DATE REVISED

01/05/07

7/32




LEVER VALVE DRINKING FOUNTAIN

CONDITION:

SOLUTION:

NO WATER FLOW:

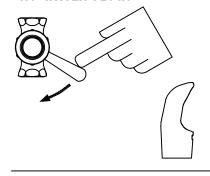


- 1.1 Check water main supply open.
- 1.2 Inspect stop (by others) open & no debris.
- 1.3 Inspect strainer (by others) for debris clean.
- 1.4 Inspect flow regulator for debris clean or replace.
- 1.5 Replace lever valve.

WATER DRIPS / WILL NOT SHUT OFF:




- 2.1 Inspect lever valve for debris clean.
- 2.2 Replace lever valve.

REDUCED WATER FLOW:

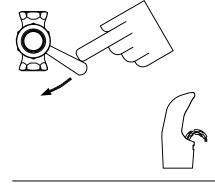


- 3.1 Check water main supply for 20 psig minimum flow pressure.
- 3.2 Inspect stop (by others) open & no debris.
- 3.3 Inspect strainer (by others) for debris clean.
- 3.4 Inspect bubbler for debris clean.
- 3.5 Inspect flow regulator for debris clean or replace.
- 3.6 Replace lever valve.

Refer to drawing #9940-206-001 for Lever Valve Maintenance Detail to locate solutions above.

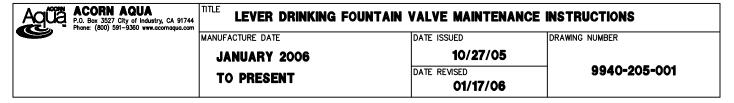



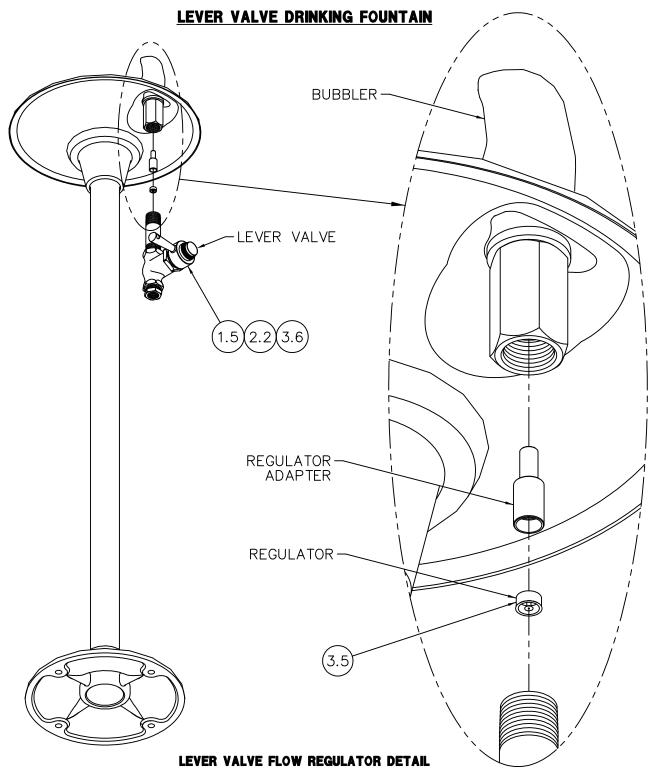

Refer to drawing #9940-205-001 for Valve Maintenance Instructions numbered solutions detailed above.

ACORN AQUA P.O. Box 3527 City of Industry, CA 917- Phone: (800) 591–9360 www.acornaqua.cc	LEVER VALVE MAINTENANCE	INSTRUCTIONS	
	MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
	JANUARY 2006	10/27/05	
4/3	TO PRESENT	DATE REVISED 01/17/06	9940-206-001