





OPTIONAL -VRP VANDAL RESISTANT PLATE AND SCREWS

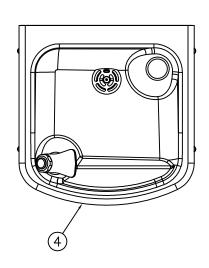

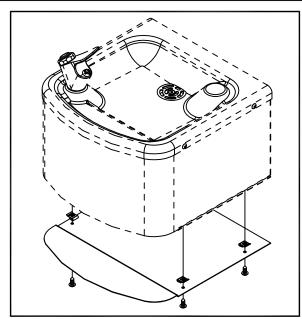


FRONT ROUGH-IN VIEW

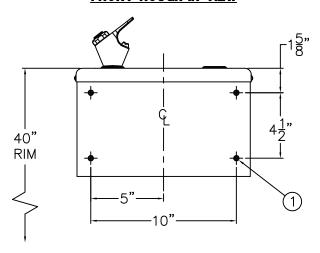

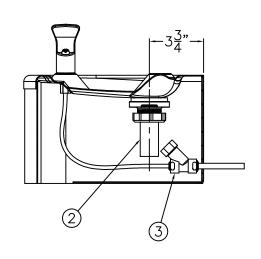


INSTALLATION INSTRUCTIONS:

 - A- STRUCTURALLY REINFORCE THE WALL BEHIND THE FOUR 3/8"
 DIAMETER MOUNTING HOLES (1) AT THE DIMENSIONS SHOWN
 AND INSTALL WALL ANCHORS BY OTHERS.
- B- ROUGH-IN WASTE OUTLET FOR THE 1-1/4" OUTER DIAMETER PLAIN END TAILPIECE (2).
- C- ROUGH-IN WATER SUPPLY FOR THE 1/4" NOMINAL (3/8" O.D.) X 4" LONG COPPER TUBE CONNECTED TO IN-LINE STRAINER (3) PROVIDED. SHUTOFF VALVE RECOMMENDED ON SUPPLY TO BE SUPPLIED BY OTHERS.
- D- CAREFULLY REMOVE FIXTURE (4) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.
- E- SECURELY ANCHOR FIXTURE (4) TO WALL THRU MOUNTING HOLES (1) WITH ANCHORING HARDWARE BY OTHERS.
- G-MAKE-UP 1-1/4" O.D. WASTE CONNECTION TO TAILPIECE (2).
- H- FLUSH WATER SUPPLY BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO FIXTURE.
- I- CONNECT THE WATER SUPPLY BY OTHERS TO 1/4" NOMINAL COPPER TUBE INLET. STOP ON THE SUPPLY IS RECOMMENDED.





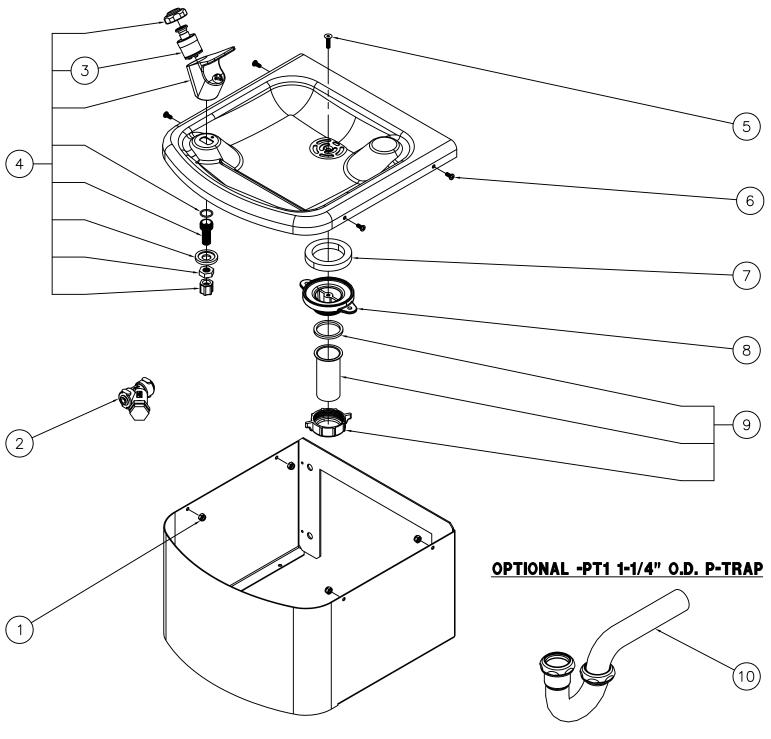

		TO DESENT		DATE REVISED	9938-251-500			
JULY 2007			09/1	9/07				
		MANUFACTURE DATE		DATE ISSUED	DRAWING NUMBER			
ACORN AQUA P.O. Box 3527 City of Industry, CA 91744 Phone: (800) 591-9360 www.acornoqua.com								
ITEN		DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION			
6	6502-100-000 #8-32 x	/8" LONG PHILLIPS HEAD SCREW						
5	0152-040-000 ALLEN FLA	T HEAD SCREW						
4	7000-000-001 DECK MOL	NTED PUSHBUTTON BUBBLER ASS	10	4953-002-000	1-1/4" x 1-1/4" OUTER DIAMETER P-TRAP			
3	7000-069-001 VALVE CA	TRIDGE WITH FOAM WASHER	9	7000-032-001	1-1/4" OUTER DIAMETER TAILPIECE ASSY			
2	7000-022-000 "Y" STRAII	ER	8	7000-005-000	DRAIN ADAPTER			
1	0308-009-000	ON INSERT LOCKNUT	7	7000-006-000	FLAT DRAIN ADAPTER GASKET			

04/08/10

TO PRESENT




STANDARD PUSH PAD / PUSH BUTTON DRINKING FOUNTAIN

CONDITION:

SOLUTION:

NO WATER FLOW:

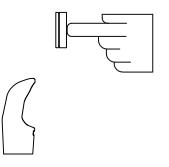

- 1.1 Check water main supply open.
- 1.2 Inspect stop (by others) open & no debris.
- 1.3 Inspect in-line strainer for debris clean.
- 1.4 Replace valve cartridge.


WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 For push pad activated drinking fountains only:

 Open fixture and move valve bracket assembly further back from push pad.
- 2.2 Replace valve cartridge.

REDUCED WATER FLOW:

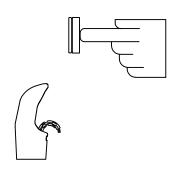

- 3.1 Adjust the valve flow rate. See appropriate fixture installation instructions.
- 3.2 Check water main supply for 20 psig minimum flow pressure.
- 3.3 Inspect stop (by others) open & no debris.
- 3.4 Inspect in-line strainer for debris clean.
- 3.5 Inspect bubbler for debris clean.
- 3.6 Inspect all tubing for twists or kinks.
- 3.7 Replace valve cartridge.

Aqüä	ACORN AQUA P.O. Box 3527 City of Industry, CA 91744 Phone: (800) 591-9360 www.acornaqua.com
------	---

1	DRINKING FOUNTAIN VALVE N	CTIONS	
	MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
	JANUARY 2006	09/28/05	
	TO PRESENT	DATE REVISED	9940-200-001