



INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1455 Kleppe Lane ♦ Sparks, NV 89431-6467 ♦ (775) 359-4712 ♦ Fax (775) 359-7424
E-mail: haws@hawsco.com ♦ website: www.hawsco.com

No. 2080065(7)

Model 7612LH Eyewash

NOTE TO INSTALLER: Please leave this information with the Maintenance Department.

LIMITED WARRANTY

HAWS® warrants that all of its products are guaranteed against defective material or poor workmanship for a period of **one year from date of shipment**. HAWS liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS Factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first class workmanship, provided that claim is made in writing to company within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS will not be liable for the cost of repairs, alterations or replacements, or for any expense connected therewith made by the owner or his agents, except upon written authority from HAWS, Sparks, Nevada. HAWS will not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that Haws has made no other warranties either expressed or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, or consequential damages claimed to arise under the contract of sale.

The emergency equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose, which they were intended. This product is intended to supplement first-aid treatment. Due to widely varying conditions HAWS cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

NO OTHER WARRANTIES EXPRESSED OR IMPLIED ARE AUTHORIZED, PROVIDED OR GIVEN BY HAWS.

SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL, PLEASE CALL:

1-800-766-5612

FOR PARTS CALL:

1-800-758-9378

**(U.S.A. AND CANADA ONLY) MONDAY-THURSDAY: 6:00 A.M. – 4:00 P.M. PST
FRIDAY: 6:00 A.M – 1:00 P.M. PST**

LOCATION OF UNIT: The Model 7612LH Eyewash should be installed in close proximity to potential accident areas. It should be clearly identified free from obstructions and easy to access.


SUPPLY LINE: The minimum recommended line size is 1/2" IPS with 30-90 psi (2-6 ATM) pressure. Where sediment or mineral content is a problem, an inlet filter is recommended.

PLUMBING CONNECTIONS: Inlet supply is 1/2" slip joint. Waste outlet is 1-1/4" NPT.


TROUBLESHOOTING


PROBLEM	REPAIR CHECKLIST
1. No flow.	1. Check the main shut-off valve.
2. Insufficient water flow.	2. a. Verify minimum 30-PSI flowing supply line pressure. b. Probable clogging of flow control due to inadequate line flushing. Unscrew eyewash heads off of bends to clean flow controls.
3. Eyewash stream does not meet desired eye level.	3. a. Possible blocked flow control, see above solution. b. Possible non-leveled eyewash assembly.
4. Water does not drain properly.	4. Check the main wasteline of your building to see if it does handle the capacity required for the entire drainage system.

PARTS BREAKDOWN

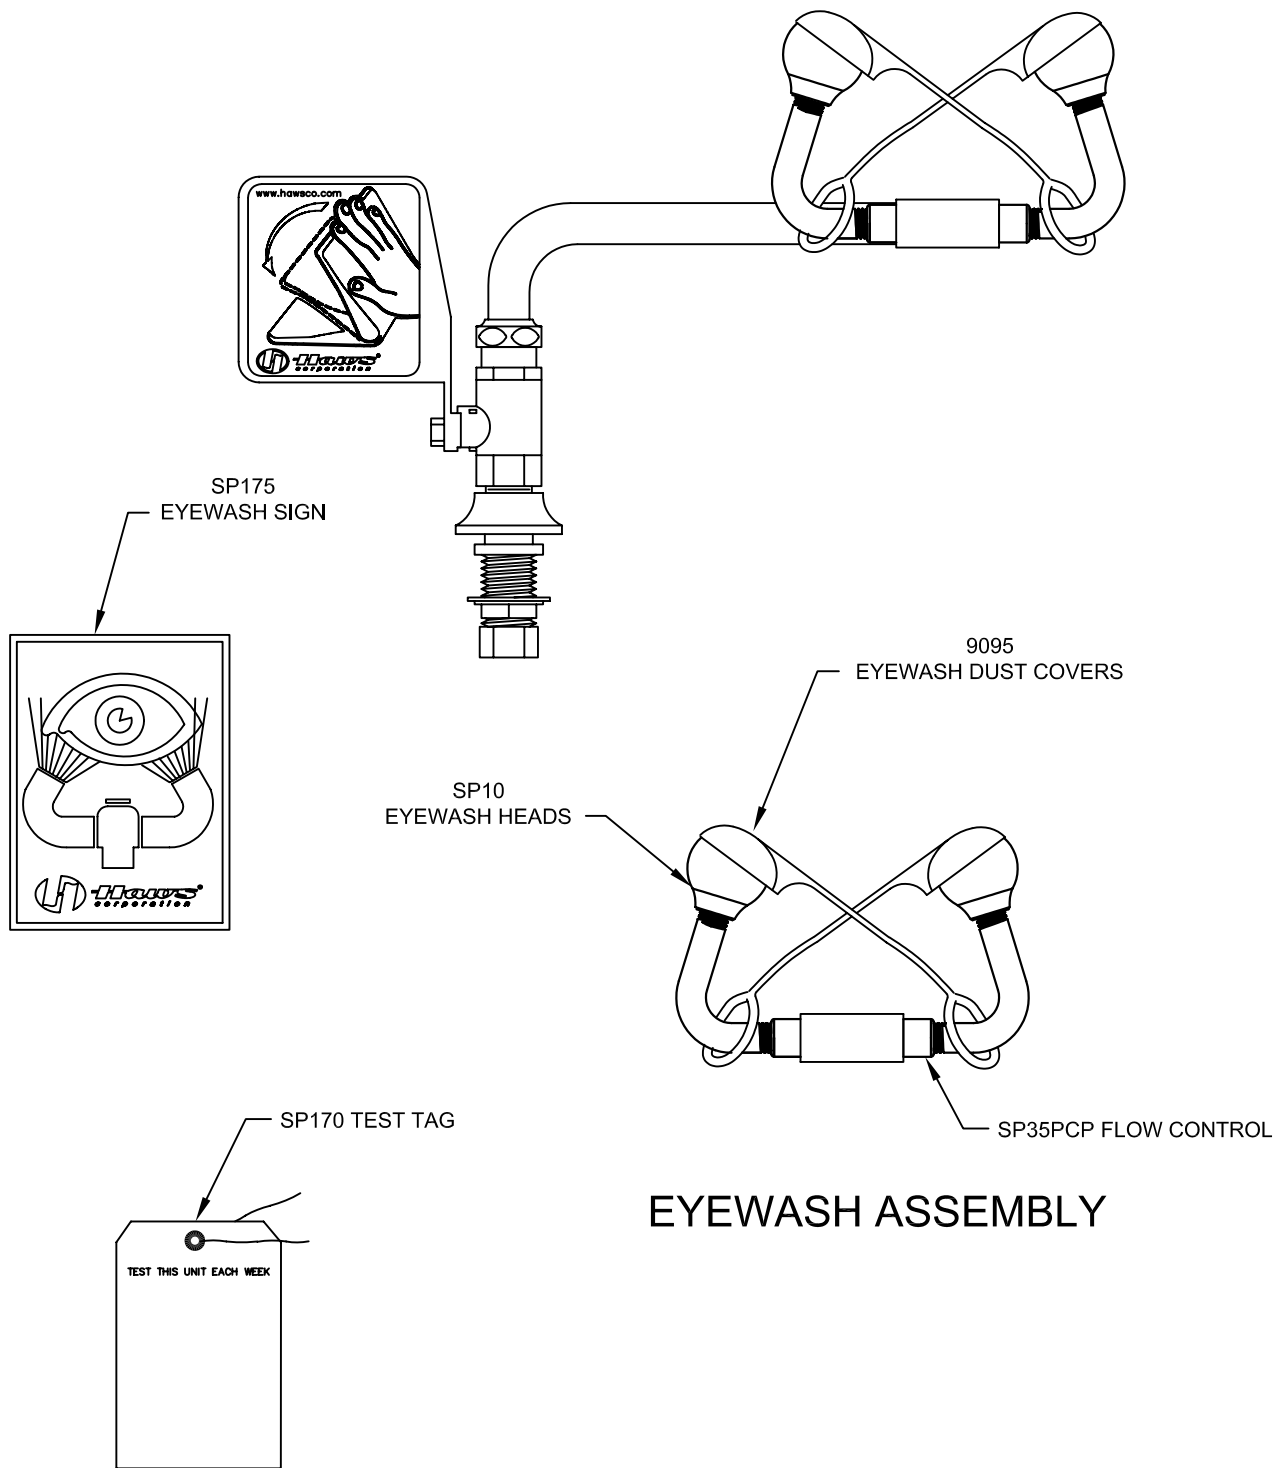

EYEWASH ASSEMBLY

WHEN ORDERING PARTS PLEASE SPECIFY YOUR MODEL NUMBER							1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWS.CO.COM WEBSITE: WWW.HAWS.CO.COM			
							DRAWN BY: FV	DATE: 11/11/96	CHECK BY:	APPVD BY:
7 UPDATED PER					4262	16/17/09	HM	TITLE: LEFT HAND DECK MTD EYEWASH 7612LH		PART NUMBER: 0002080065
REV	DESCRIPTION	ECN	DATE	BY/APVD	DRAWING TYPE: PARTS BREAKDOWN			DRAWING NUMBER: 12726C00	REV. 7	
REVISIONS										

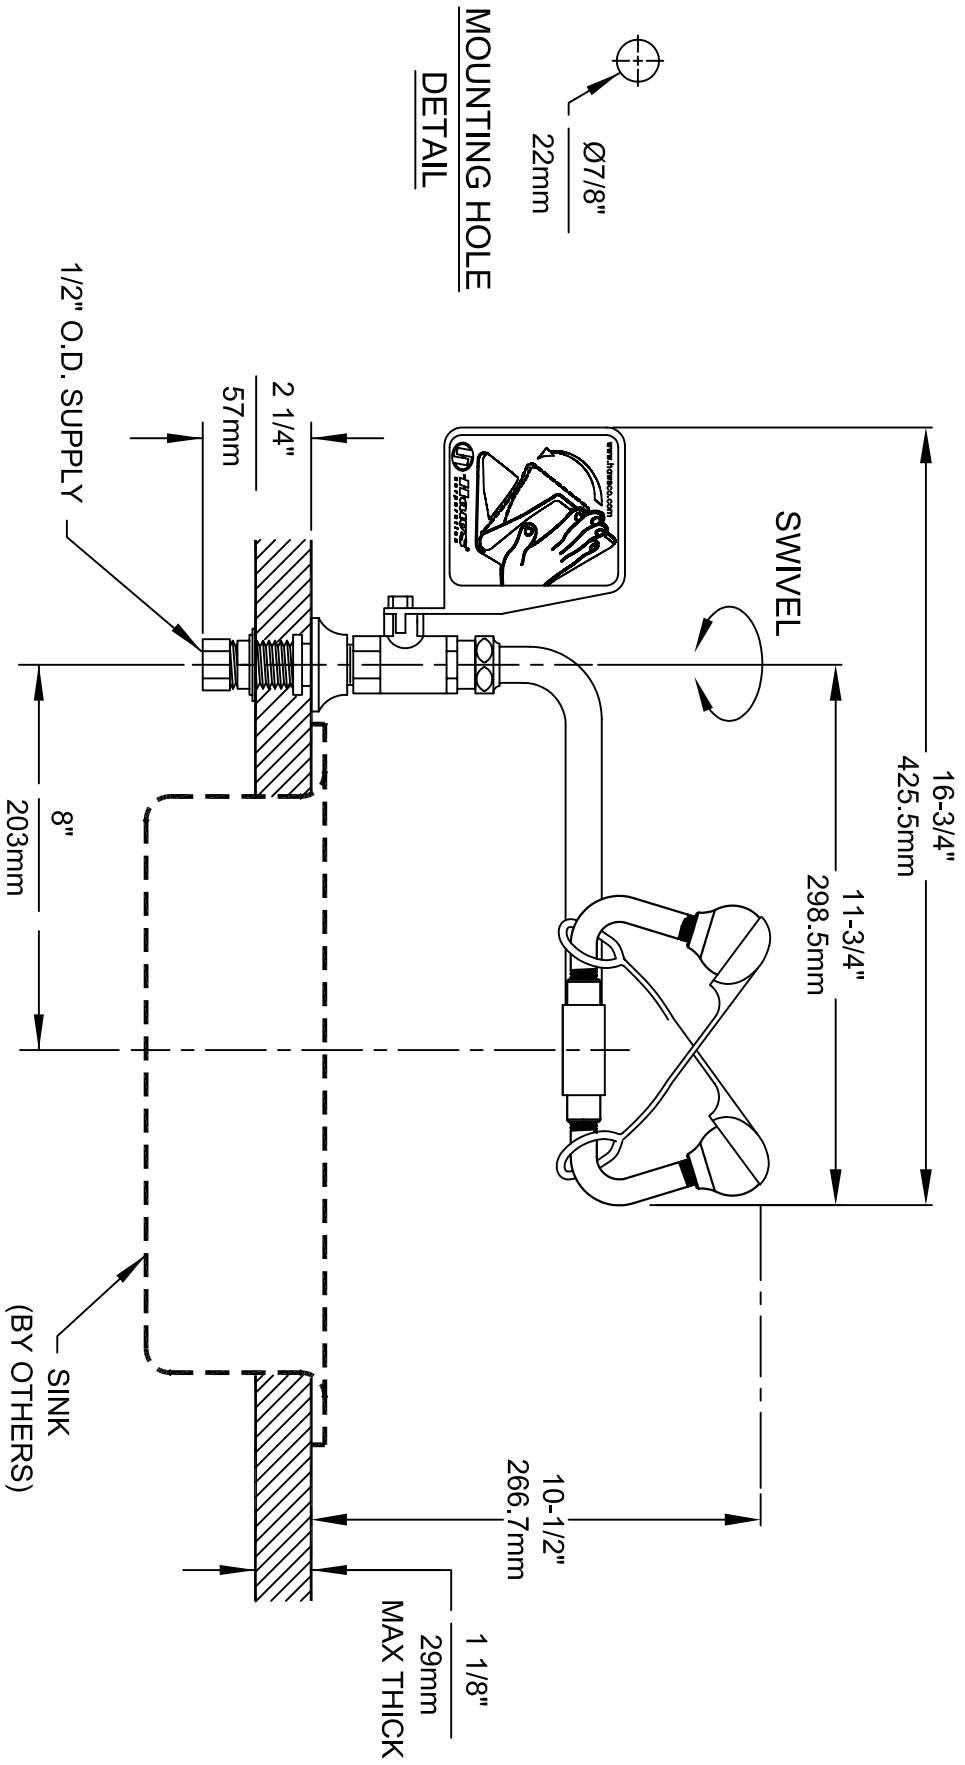

NOTES:

1. THE ANSI STANDARD SPECIFIES EYEWASH NOZZLE HEIGHTS TO BE 33" [838mm] TO 45" [1143mm] ABOVE THE FLOOR. CENTERLINE OF EYEWASH HEADS MUST BE 6" [152mm] MIN. AWAY FROM WALL.
2. DIMENSIONS MAY VARY ±1/2" [13mm].

		1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCCO.COM WEBSITE: WWW.HAWSCCO.COM	
ED. NO. 1	REVISIONS	NO. 020800065 D	DATE 08/07/07
DRAWN: C. HAYES	DATE: 03/19/92	7612LH	10075A00
APPROVED:	DATE:	2761254	7
MODEL(S): LEFT HAND DECK MTD EYEWASH	INFO FAX DOC #:	7612LH	
INSTALLATION/EXHIBIT	INSTALLATION/EXHIBIT		