

## Waterfree Cartridge Kit

### Installation & Operating Instruction Manual


Thoroughly read this instruction booklet before using Sloan products.

Keep this **Installation & Operating Instruction Manual** with other product information for future reference.

**WES-150** Waterfree Cartridge Kit

#### Cartridge Kit Includes:

- Cartridge (1)
- Cartridge Key (1)
- Sealant Package (1)
- Disposal Bag (1)
- Protective Glove (2)

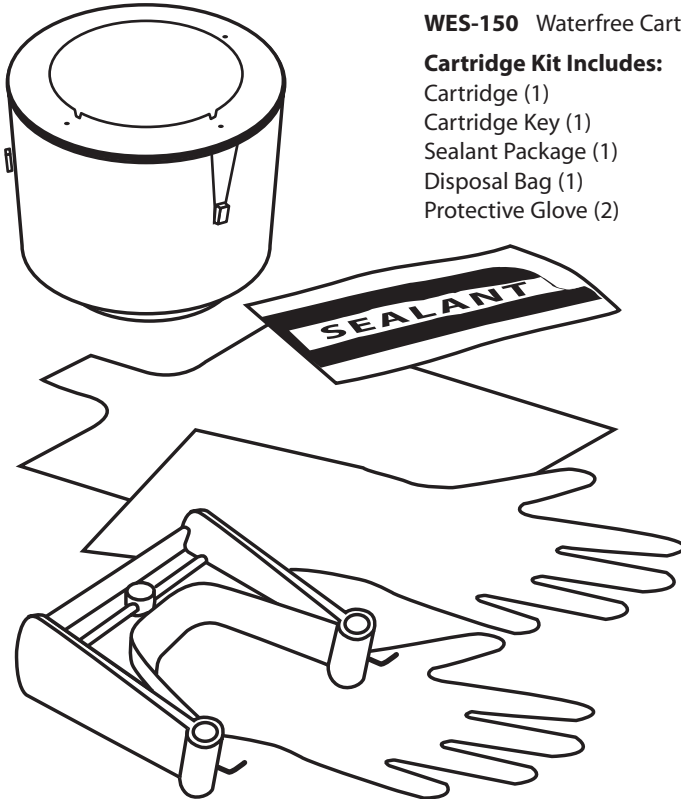

### Table of Contents


	Page
Removal and Installation of Cartridge	2-3
Cartridge Sealant Instructions	3
Care and Cleaning	4

## REMOVAL OF OLD CARTRIDGE

Replace cartridge every 3 months or 7,000 uses depending on usage


### Step 1

Pour a quart (liter) of water into Cartridge to flush it. Insert Key into the Cartridge and turn counterclockwise.

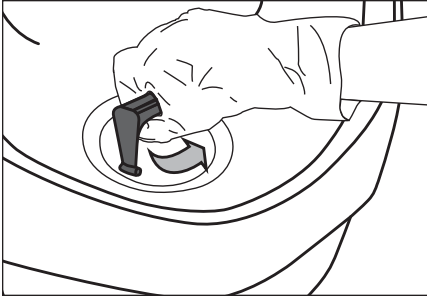

### Step 2

Extract the Cartridge by pulling up on the Key. Tilt the Cartridge in the housing to drain contents.

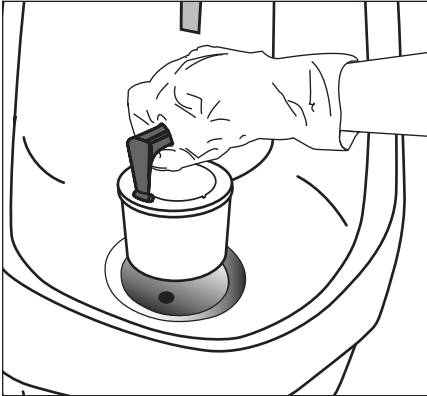

### Step 3

Open the yellow Disposal Bag, keeping the Cartridge upright. Insert it into the Disposal Bag.



### Step 4


Close the bag, tie the tabs together and dispose of it properly or return recyclable unit to Sloan (see [www.sloanvalve.com](http://www.sloanvalve.com) for details).



## CARTRIDGE INSTALLATION


### Step 1

Before inserting Cartridge, pour a gallon of clean, hot soapy water into Housing to flush it. Use hose if available.

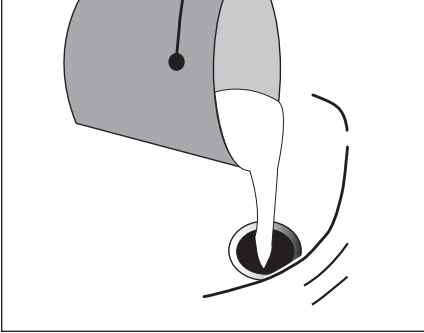


### Step 2

Insert the Cartridge into the housing with the logo at the 11 o'clock position.

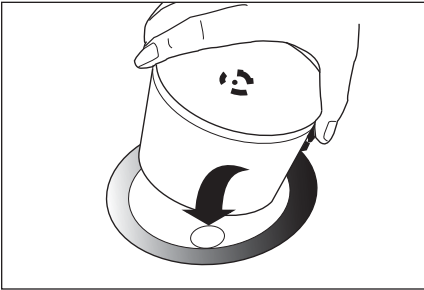

### Step 3


Insert the Key into the top of Cartridge and turn the Cartridge clockwise to the 12 o'clock position to lock it in place. Remove the Key.

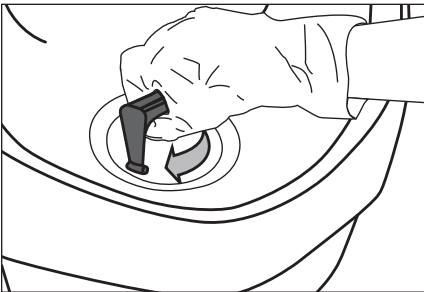

## FILL CARTRIDGE


### Step 1

Pour half quart (half liter) or 1 pint of water into the newly installed Cartridge.

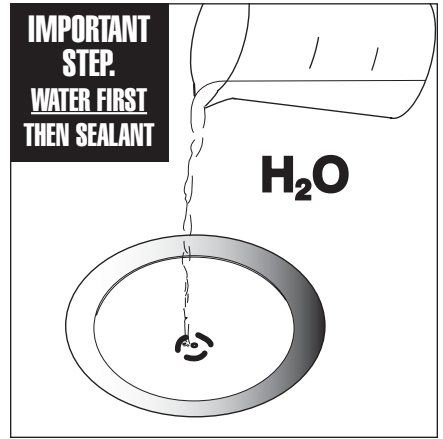


### Step 2

Remove the Sealant package from the box and tear off the top.

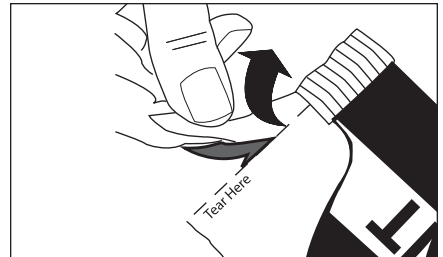

### Step 3


Pour Sealant into the Cartridge drain opening, wipe off excess Sealant and attach shield. The urinal is now ready for use.

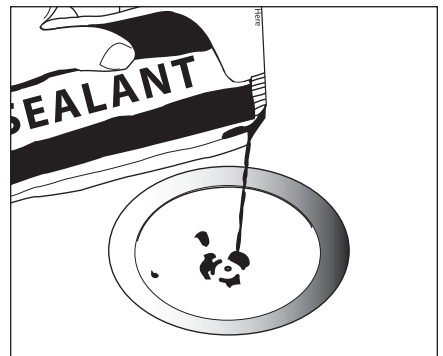

## CARE AND CLEANING


### Step 1

Remove all debris from the surface of the urinal.

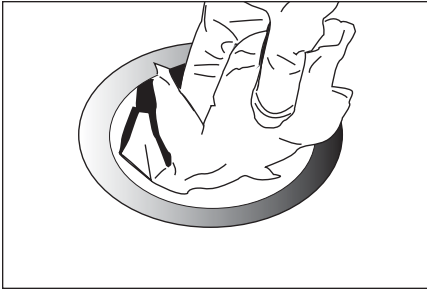


### Step 2

Spray Urinal surface lightly with a mildly acidic, non-degreaser, disinfectant liquid cleaner. For a list of approved cleaners for vitreous china, visit [www.sloanvalve.com/182\\_245.htm](http://www.sloanvalve.com/182_245.htm).

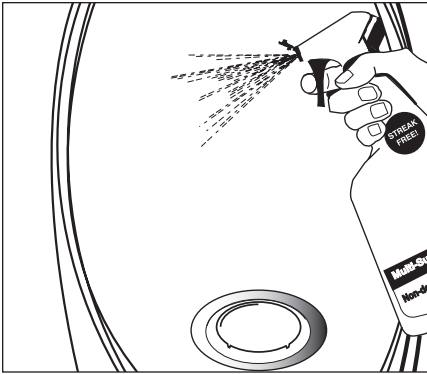


### Step 3

Wipe surface with a soft cloth or sponge applicator until clean.

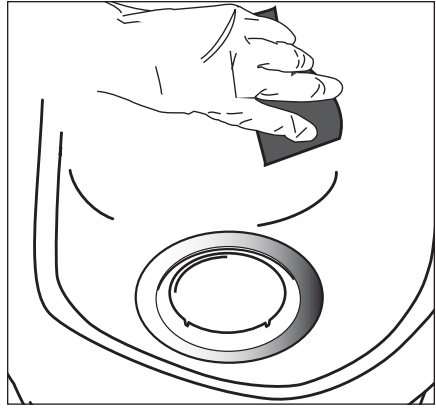

**DO NOT DUMP BUCKETS OF WATER INTO URINAL WITH CARTRIDGE INSTALLED**

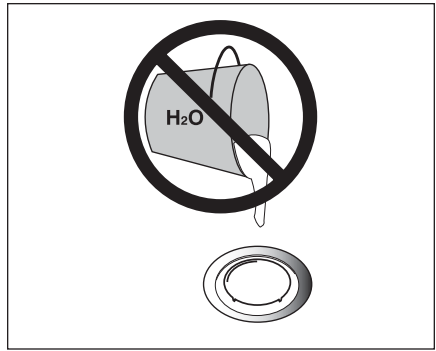

# SLOAN®

The information contained in this document is subject to change without notice.

Sloan HEALTHMINDER™ Products  
10500 Seymour Avenue  
Franklin Park, IL 60131-1259  
Phone: 877-652-6726  
Fax: 800-447-8329  
[www.sloanvalve.com](http://www.sloanvalve.com)

©2009 Sloan Valve Company  
Printed in the U.S.A. JSD6035.1 01/09